


140mm
140mm
140mm




**NEON AQUA 240 CPU LIQUID COOLING SYSTEM USER'S MANUAL**  
NEON AQUA 240 水冷散熱器說明書

1. Keep and store the product away from the reach of children.  
2. Check the component list and condition of the product before installation. If there is any problem, contact the shop where you purchased to get a replacement or refund.  
3. Xigmatek Co., Ltd. is not responsible for any damages due to external causes, including but not limited to improper use, problems with electrical power, accident, fire, natural disaster, product alteration or modification, or improper installation, neglect, alteration, repair, improper installation, and improper testing.  
4. CPU and motherboard are subject to damage if the product is incorrectly installed.

1. 請妥善存放產品，並遠離兒童可觸及之處。  
2. 安裝前請檢查產品及零件包，如有任何問題，請聯絡購買商。  
3. 本公司對因外部因素造成的損壞，如：下列情況發生，則產品不適用於原來的產品保證條款，因意外事件、人為破壞、誤用、未經允許的修改、更改或修改產品保證條款，或因自然災害、產品更改或修改、或安裝不當、疏忽、更改、修理、安裝不當、測試、或安裝不當，以及安裝不當造成的損壞。  
4. CPU及主機板因安裝不當，不適用於原來的產品保證條款。

### Intel LGA 115x/1200/1700


**1**

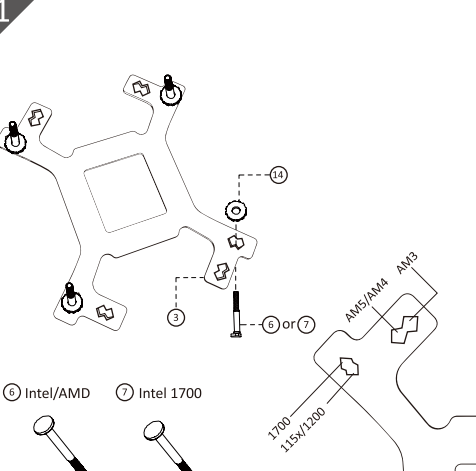

1. Insert screw bolts to Intel 1700 or 115x/1200 backplate mounting holes.  
2. Install screw bolt washers to lock the screw bolts & backplate.

1. 安裝螺絲釘至主機板 Intel 1700 或 115x/1200 強化背板孔。  
2. 安裝強化背板螺絲墊，將螺絲釘鎖緊。


**2**

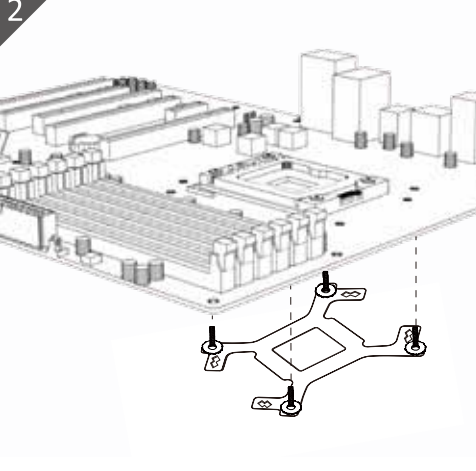

1. Make sure the screw bolt is lock in on the backplate.  
2. Install the backplate to motherboard.

1. 請確認螺絲釘正確鎖在在強化背板上。  
2. 安裝強化背板到主機板安裝孔。


**3**

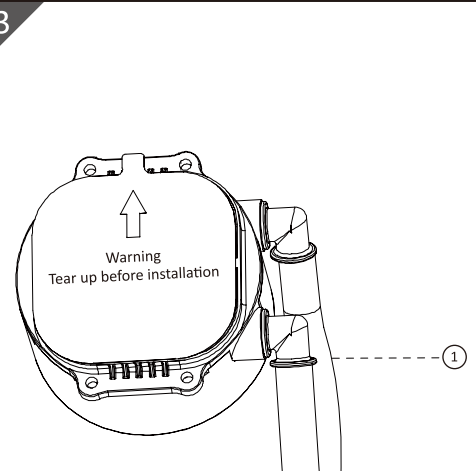

Remove copper cold plate protective film.

移除水冷銅板保護膜。


**4**

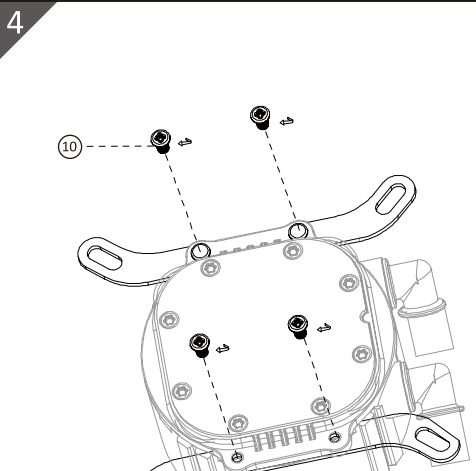

Install the Intel pump head mounting brackets.

安裝Intel水冷頭固定支架。


**5**

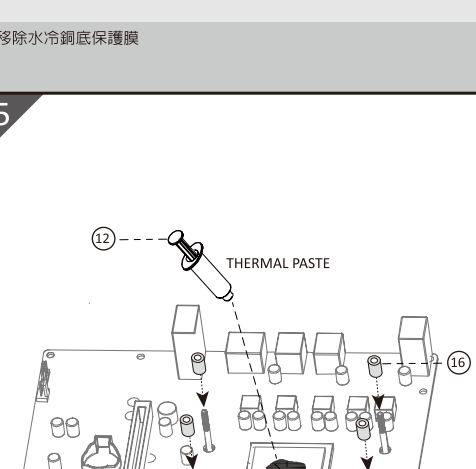

1. Clean the CPU surface.  
2. Apply and spread the thermal paste to CPU evenly using included spatula.  
3. Place the stand-off to backplate screw bolt.

1. 清潔CPU表面。  
2. CPU表面塗抹導熱膏時，用抹刀塗抹均勻。  
3. 放置墊圈到強化背板螺絲釘。

**6**

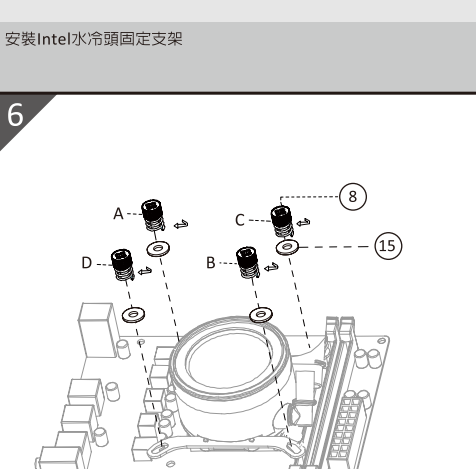


1. Align the Intel pump head mounting brackets to backplate screw bolts to complete the pump head and motherboard installation.  
2. Use the stand-off to complete the pump head and motherboard installation.

1. 安裝水冷頭對準背板螺絲釘後放置在CPU上。  
2. 使用彈簧墊圈完成水冷頭及主板的安裝。

### AMD AM3/AM4/AM5


**1**

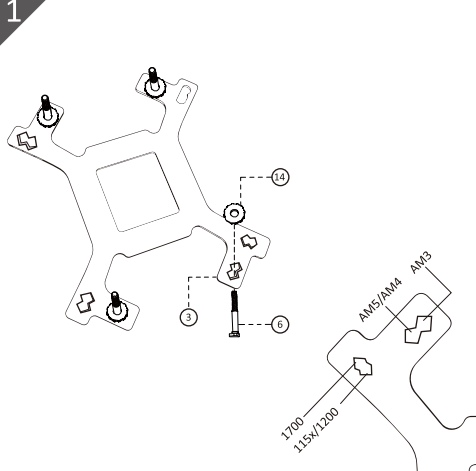

1. Insert screw bolts to AMD AM3 or AM4/AM5 backplate mounting holes.  
2. Install screw bolt washers to lock the screw bolts & backplate.

1. 安裝螺絲釘至主機板 AMD AM3 或 AM4/AM5 強化背板孔。  
2. 安裝強化背板螺絲墊，將螺絲釘鎖緊。


**2**

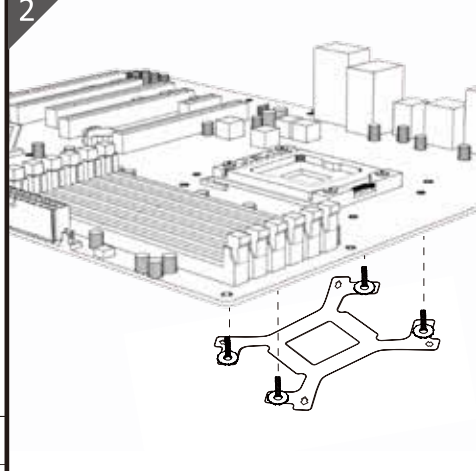

1. Make sure the screw bolt is lock in on the backplate.  
2. Install the backplate to motherboard.

1. 請確認螺絲釘正確鎖在在強化背板上。  
2. 安裝強化背板到主機板安裝孔。


**3**

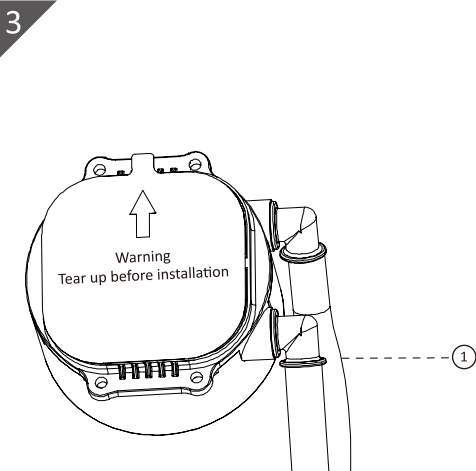

Remove copper cold plate protective film.

移除水冷銅板保護膜。


**4**

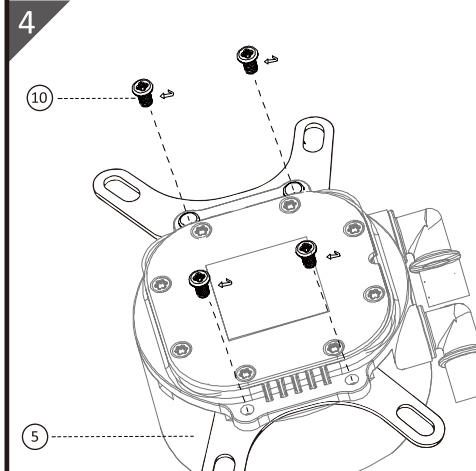

Install the AMD pump head mounting brackets.

安裝AMD水冷頭固定支架。


**5**



1. Clean the CPU surface.  
2. Apply and spread the thermal paste to CPU evenly using included spatula.  
3. Place the stand-off to backplate screw bolt.

1. 清潔CPU表面。  
2. CPU表面塗抹導熱膏時，用抹刀塗抹均勻。  
3. 放置墊圈到強化背板螺絲釘。

**6**

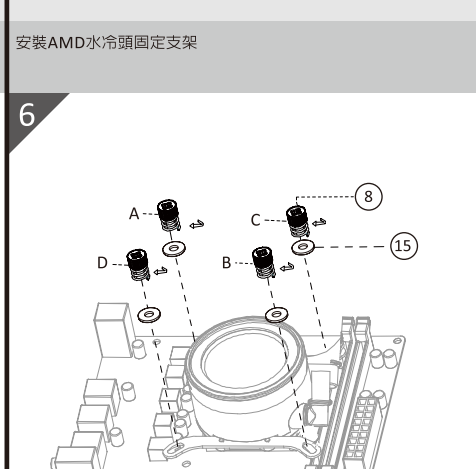






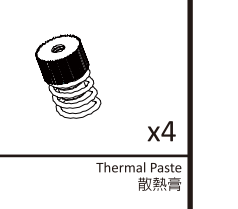
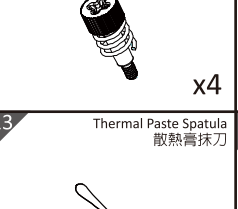
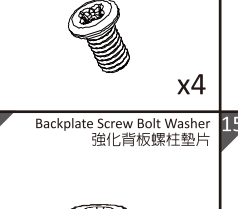
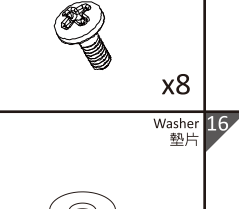
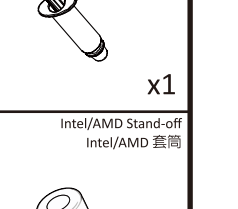

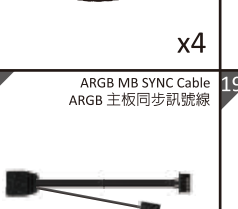








1. Align the AMD pump head mounting brackets to backplate screw bolts to complete the pump head and motherboard installation.  
2. Use the stand-off to complete the pump head and motherboard installation.


1. 安裝水冷頭對準背板螺絲釘後放置在CPU上。  
2. 使用彈簧墊圈完成水冷頭及主板的安裝。

140mm
140mm
140mm
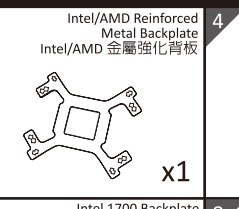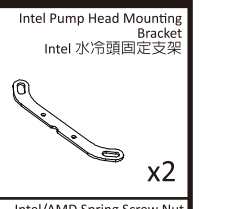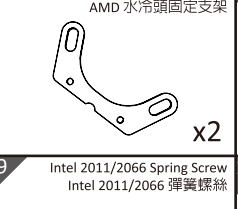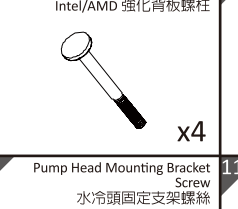
### NEON AQUA 240 ACCESSORIES

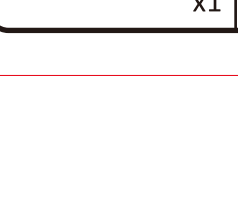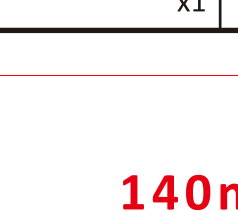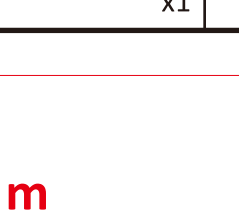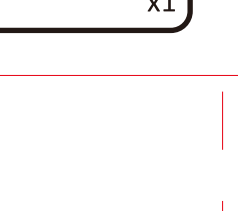
 x1	 x2	 x1	 x2
 x2	 x4	 x4	 x4
 x4	 x4	 x8	 x1
 x1	 x4	 x4	 x4
 x1	 x1	 x1	 x4

### Intel LGA 2011/2066

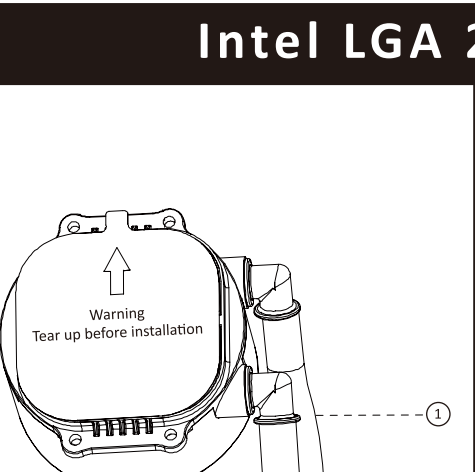


Remove copper cold plate protective film.

移除水冷銅板保護膜。

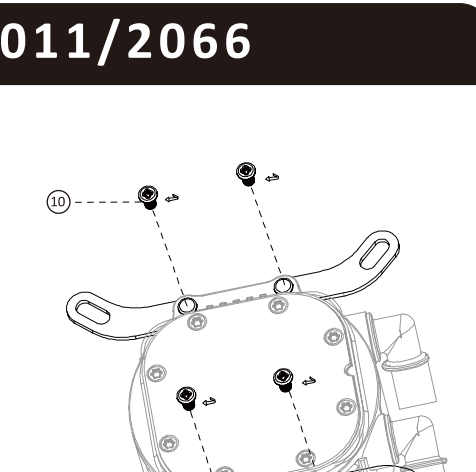


Install the Intel pump head mounting brackets.

安裝Intel水冷頭固定支架。

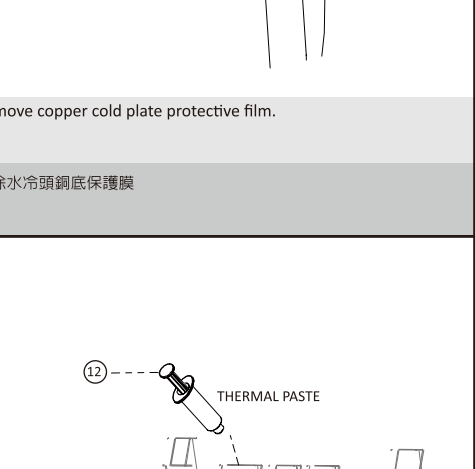

1. Clean the CPU surface.  
2. Apply and spread the thermal paste to CPU evenly using included spatula.


1. 清潔CPU表面。  
2. CPU表面塗抹導熱膏時，用抹刀塗抹均勻。

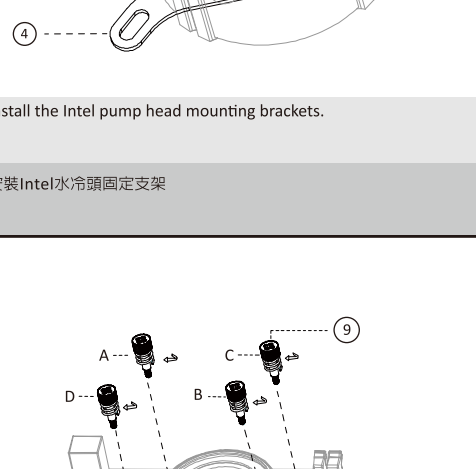

1. Align the Intel 2011/2066 pump head mounting brackets to backplate screw bolts, then place the pump head on the CPU carefully.  
2. Using spring screw to complete the pump head and motherboard installation.

1. 安裝水冷頭對準背板螺絲釘後放置在CPU上。  
2. 使用彈簧墊圈完成水冷頭及主板的安裝。

### Cable & Connector Installation

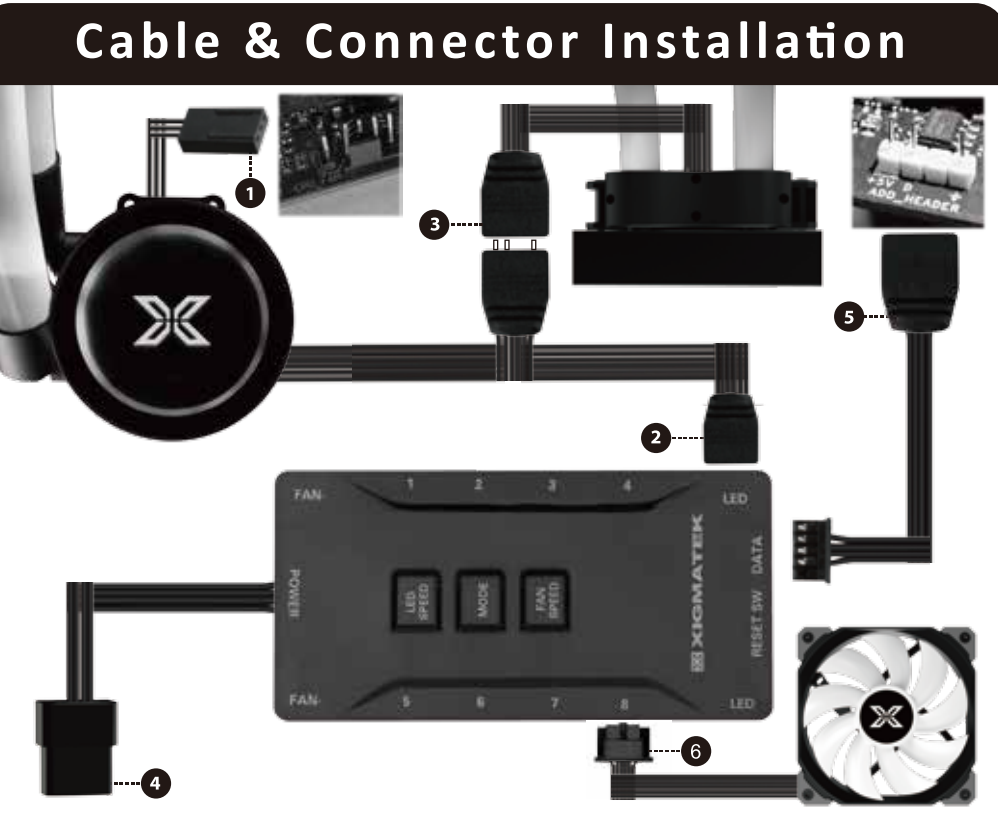


- Pump to Motherboard CPU Fan Socket (Please Set BIOS CPU Fan Speed at Full Speed Mode)
- Pump LED to ARGB Control Box
- ARGB Tube to ARGB Control Box or Link with Pump LED 3P ARGB Connector
- Control Box Power Cable to PSU
- ARGB MB SYNC Signal to Motherboard ARGB Header
- ARGB Fans to ARGB Control Box

1. 水冷頭連接主機板CPU風扇插孔(BIOS CPU Fan轉速請調整為全速模式)  
2. 水冷頭LED連接ARGB控制盒  
3. ARGB發光水管連接ARGB控制盒或連接水冷頭的3P ARGB插頭  
4. ARGB控制盒供電線連接電源供應器  
5. ARGB MB SYNC同步訊號連接主機板ARGB孔  
6. ARGB風扇連接ARGB控制盒

148.5mm
148.5mm

### Galaxy II Fan Control Box

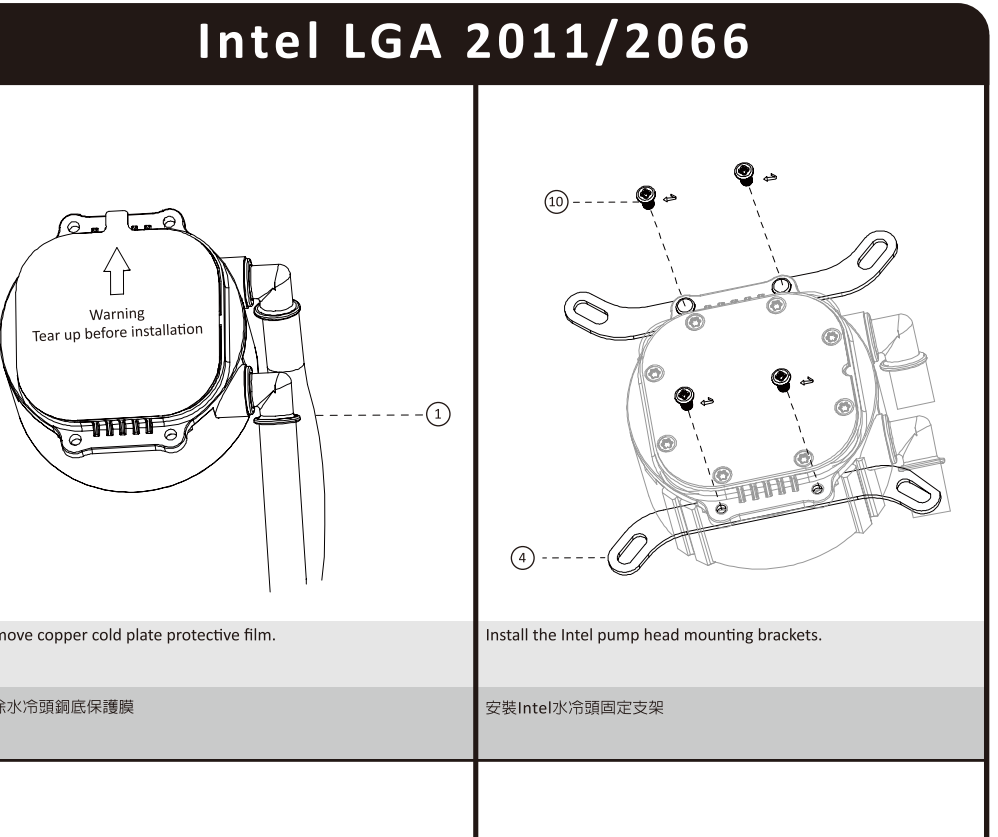


- Fan 1~8: 6Pin Port
- Power: 4Pin Molex Power Connector (To PSU)
- LED SPEED
- MODE
- FAN SPEED
- LED: ARGB Port (Connect Other ARGB Accessories)
- DATA: ARGB Port (Connect to ARGB Motherboard)
- Reset SW: Connect to PC Case Reset Button To Change Color Mode

1. Fan 1~8: 6Pin 孔位  
2. 大4P接頭 (連接電源供應器)  
3. LED SPEED  
4. MODE  
5. FAN SPEED  
6. LED: ARGB孔位(可連接其它標準ARGB周邊零件)  
7. DATA: ARGB孔位(連接主機板)  
8. 連接機殼Reset按鈕，可切換燈效模式

ARGB控制盒功耗:  
最高可支援 Total 40W  
12V最高可支援 Total 30W  
注意: 請勿短接使用ARGB控制盒，這是非常危險且有可能造成損壞。

注意事項  
1. 請注意您的電源供應器5V & 12V電流輸出的規格，請確保電源供應器的大4P接頭可以支援足夠的電流輸出，造成聲障導致器材過熱或融化。  
2. 請選擇至少50W的電源供應器，如果連接超過6個風扇時，請確定大4P線材符合18AWG的標準。  
3. 此ARGB控制盒不支援4Pin RGB或12V RGB 風扇或燈條。

### ARGB Remote Controller

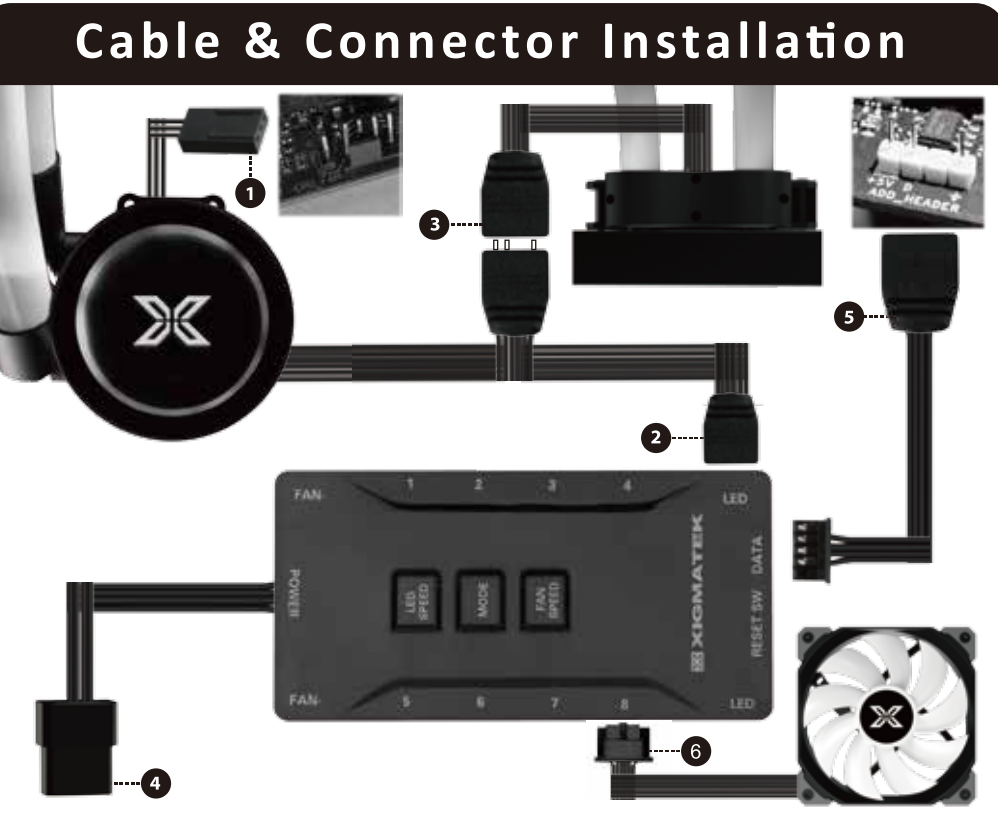


ARGB ON/OFF 燈效關閉  
Fan Speed(Fast & Slow Mode) 風扇轉速(2段式)  
Star Night Mode 夜視星光模式  
Lighting Mode 閃電模式  
Red LED Mode 紅燈模式

Display Mode Selection 燈效模式選擇  
LED Speed 燈效速度  
Rainbow Mode 彩虹模式  
Breathing Mode 呼吸燈模式  
Blue LED Mode 藍燈模式  
Green LED Mode 綠燈模式  
Motherboard SYNC 主機板同步

CAUTION 注意事項  
To Sync with the ARGB motherboard, press M/B SYNC button after connecting the fans and ARGB cable to motherboard ARGB header.

當ARGB風扇及ARGB水冷頭LED連接ARGB控制盒後，主機板同步按鈕可與主機板主控制或ARGB控制盒主控模式。

### Special Note



During installation when release the fan cable from the control box, please push the connector locking clip to avoid damage, do not pull the fan cable directly!

安裝水冷頭LED & ARGB風扇時如需鬆脫線材插頭，請務必按下插頭的鎖定卡扣，以免造成損壞，請勿直接拉扯線材。

148.5mm
148.5mm

 


# NEON AQUA 240 MANUAL 摺法(單色黑雙面印刷)

## N摺+對摺 100P模造紙印刷

尺寸：W420mm x H297mm

摺疊尺寸：W140mm x H148.5mm

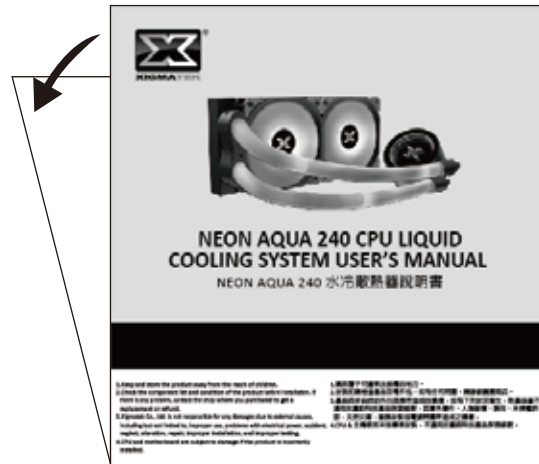

這面要在上面

### 正面完成圖



### 背面完成圖

